





# CLUTCH SHOE TOOL

## INSTALLATION

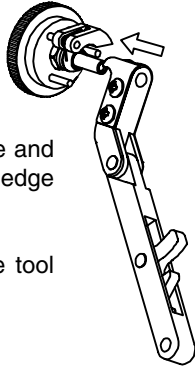

Place the clutch shoe and spring onto the outer edge of the flywheel pin.

Slide the clutch shoe tool onto the pilot shaft.

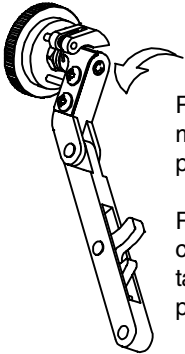


Position the tool's curved metal tab between the pilot shaft and clutch shoe.

Rotate the handle counter clockwise until the curved tab is seated between the pilot shaft and clutch spring.


Fold the tool bringing the flat side of the lever to the face of the clutch shoe.

Slide the handle towards the flywheel to position the clutch shoe and spring.

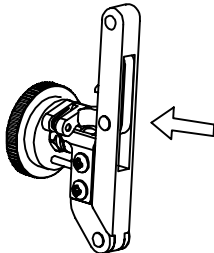


Rotate the handle clockwise until the metal tab slips from between the spring and pilot shaft and remove the tool.

## REMOVAL

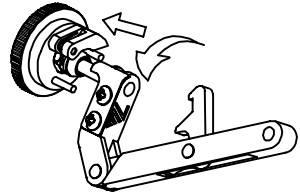


Slide the clutch shoe tool onto the pilot shaft and position the curved metal tab between the pilot shaft and clutch shoe.

Rotate the handle counter clockwise until the curved tab is seated between the pilot shaft and clutch spring.

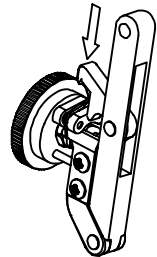

Fold the tool and hook the lever to the clutch shoe.

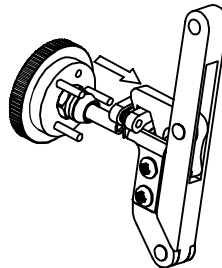

Pull the handle away from the flywheel. The clutch shoe and spring will slide away from the flywheel.