Follow directions if you are converting your pull-start engine into a non pull-start engine with an MIP ButtsinkTM. If your engine is already non pull-start just simply replace engine backplate with MIP ButtsinkTM.

- 1: Disassemble your engine and remove the crankshaft from the crankcase.
- Wearing safety glasses, grind off the area shaded in Fig. A. Carefully wipe off all dust and debris.
- 3: Reinstall the crankshaft into the crankcase. Use supplied gasket and cap-head screws to bolt the MIP Buttsink™ onto the back of your engine. You can replace



your motor mounts with Team Associated's non pull-start motor mounts and one of MIP's high performance flywheels to lower your engine and improve performance.

Moore's Ideal Products 830 W. Golden Grove Way, Covina CA 91722 (626) 339-9008

RETURN TO LIST OF INSTRUCTION SHEETS

1 of 1 8/6/2005 10:38 AM