


SP12M Tubedamper Assembly


Step 1

Mount the balljoints and washers.
It's necessary to use the optional Motorpod and SP12M Damperplate

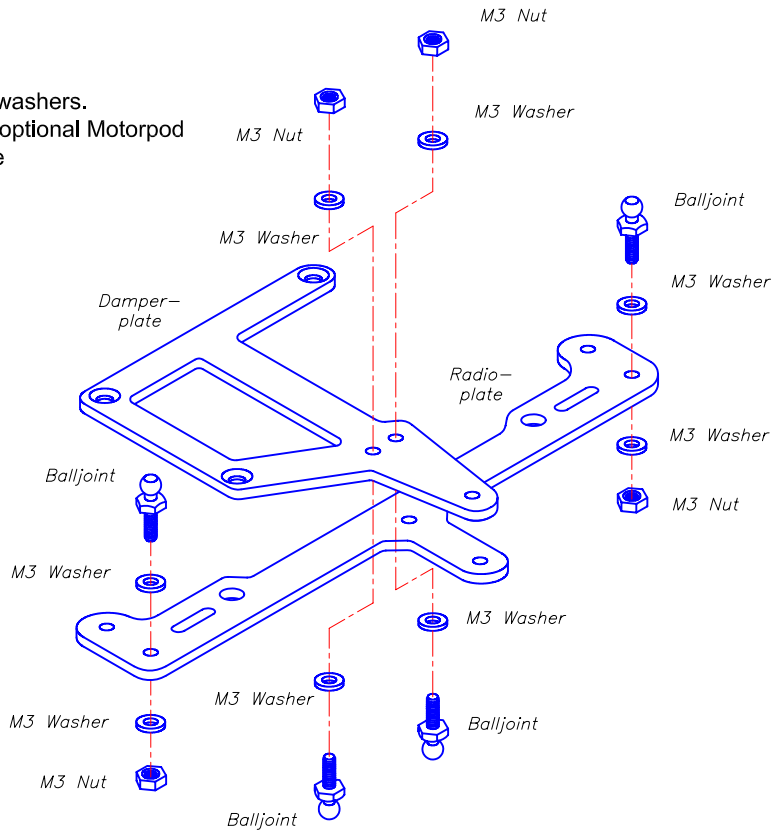

Step 2

Built 2 identical Tubedampers

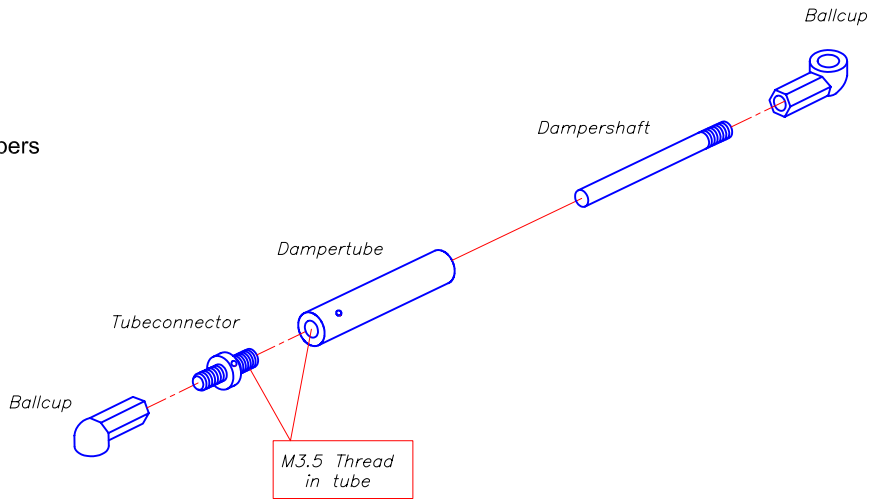

Step 3

Snap the ballcups of the damper
on the balljoints.
Right side is shown, do the same for the left side.

