




Zero Maintenance Light Weight Ball Bearing Steering Kits: #1003, 1004, 3013, 1080

MIP's Ball Bearing Steering systems will work on graphite or tub chassis.

#302
10/97

COMPLETE ASSEMBLY

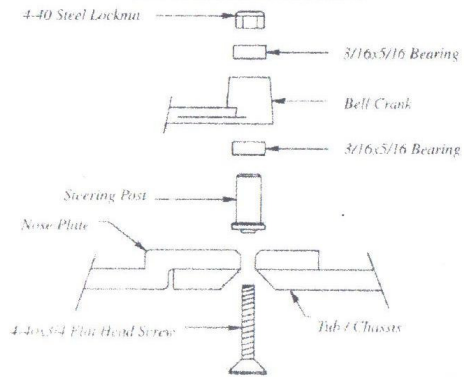

Read Instructions Before Installation:

1. Remove the stock steering assembly.
2. Screw the stock ball ends into the bell cranks or try MIP's oversized B.J. Ball Ends to remove excess slop.
3. Follow the diagram to assemble and install the steering bell cranks onto the chassis.
4. Use a Kimbrough servo saver with these steering systems.
5. Do not oil or spray out bearings with cleaner. Gently use a soft brush to clean away dirt.
6. For the RC-10E. Cut the #8 short center screw that holds on the nose piece flush with the chassis. This will allow clearance for the steering arm.

Good Luck In Your Racing!

Moore's Ideal Products 830 W. Golden Grove Way Covina, CA. 91722 USA (626) 339-9008