


## 1/10th Scale Side Pipe Kits for Touring Cars, and Gas Trucks:

#359

MIP has produced the highest quality side headers, and pipes available. High performance Side Pipe kits include a header, a side pipe, and hardware.

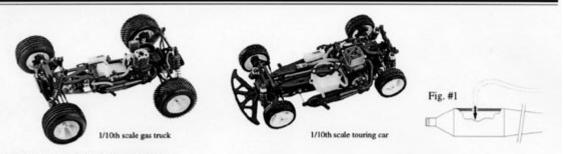

- 1. Remove your stock pipe and header.
- 2. Use supplied header gasket and screws to blot the MIP side header onto your motor.
- Use soapy water to lubricate the black header hose while stretching it over the end of the Side Pipe and Header. Now secure in place with supplied black high temp. tie wraps.
- Connect MIP fuel tubing to pressure fitting on the gas tank, and push the other end of the fuel tubing into the hole in the Side Pipe about 1/2 inch (Fig. #1).
- Depending on which vehicle you have, you will have to custom bend the Side Pipe support wire. Using the supplied set screw attach to end of the Side Pipe while bolting the other end to a secure location on the chassis.

Moore's Ideal Products • 830 W. Golden Grove Way • Covina, CA 91722 • USA • 626-339-9008

RETURN TO LIST OF INSTRUCTION SHEETS

1 of 1 8/6/2005 10:36 AM