


HUCKEPACK

T0179


STEP 1

- 1
- 3
- 4
- 7

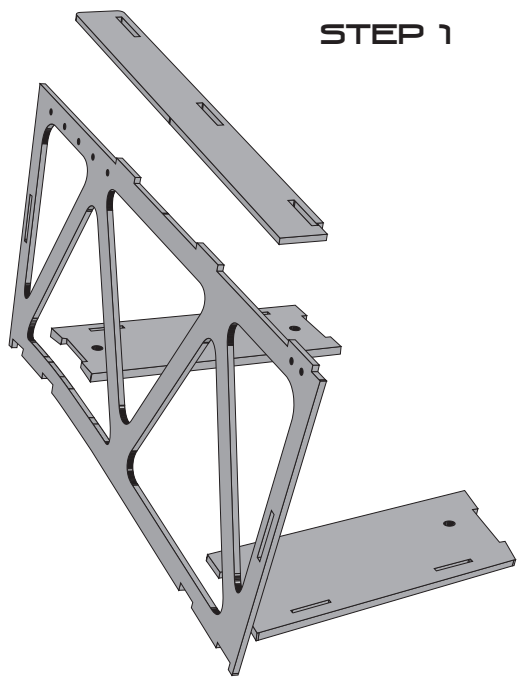


STEP 2

- 5
- 6
- 2
- 8

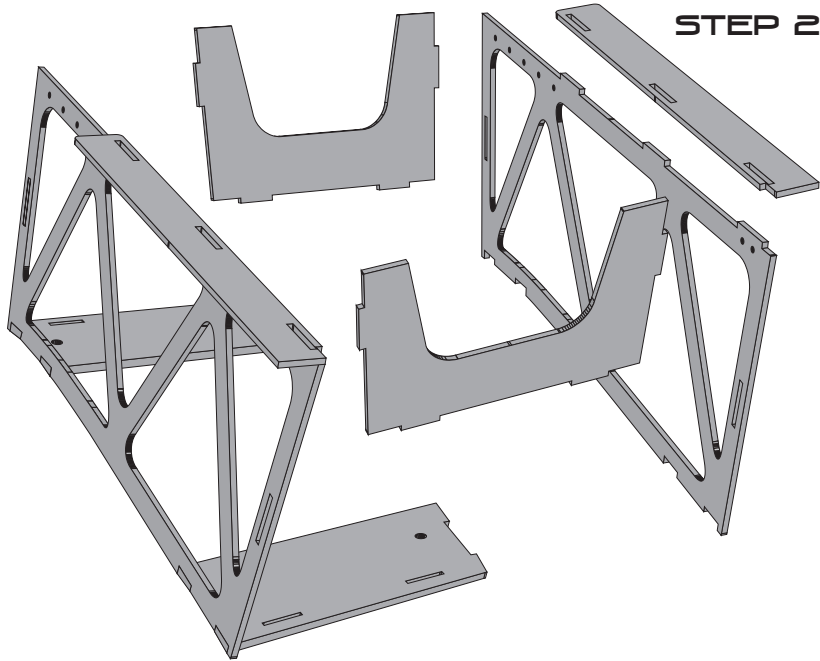

STEP 3



- 9
- 10
- 11
- 12
- 13
- 14
- 15
- 16

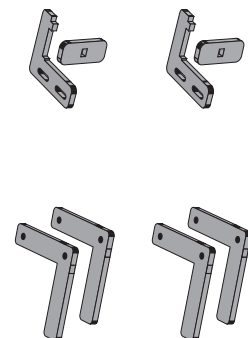

FRONT

STEP 4

- MUST MOVE FREELY
- MOET VRIJ KUNNEN BEWEGEN
- DOIT BOUGER LIBREMENT
- MUSS FREI BEWEGEN KÖNNEN

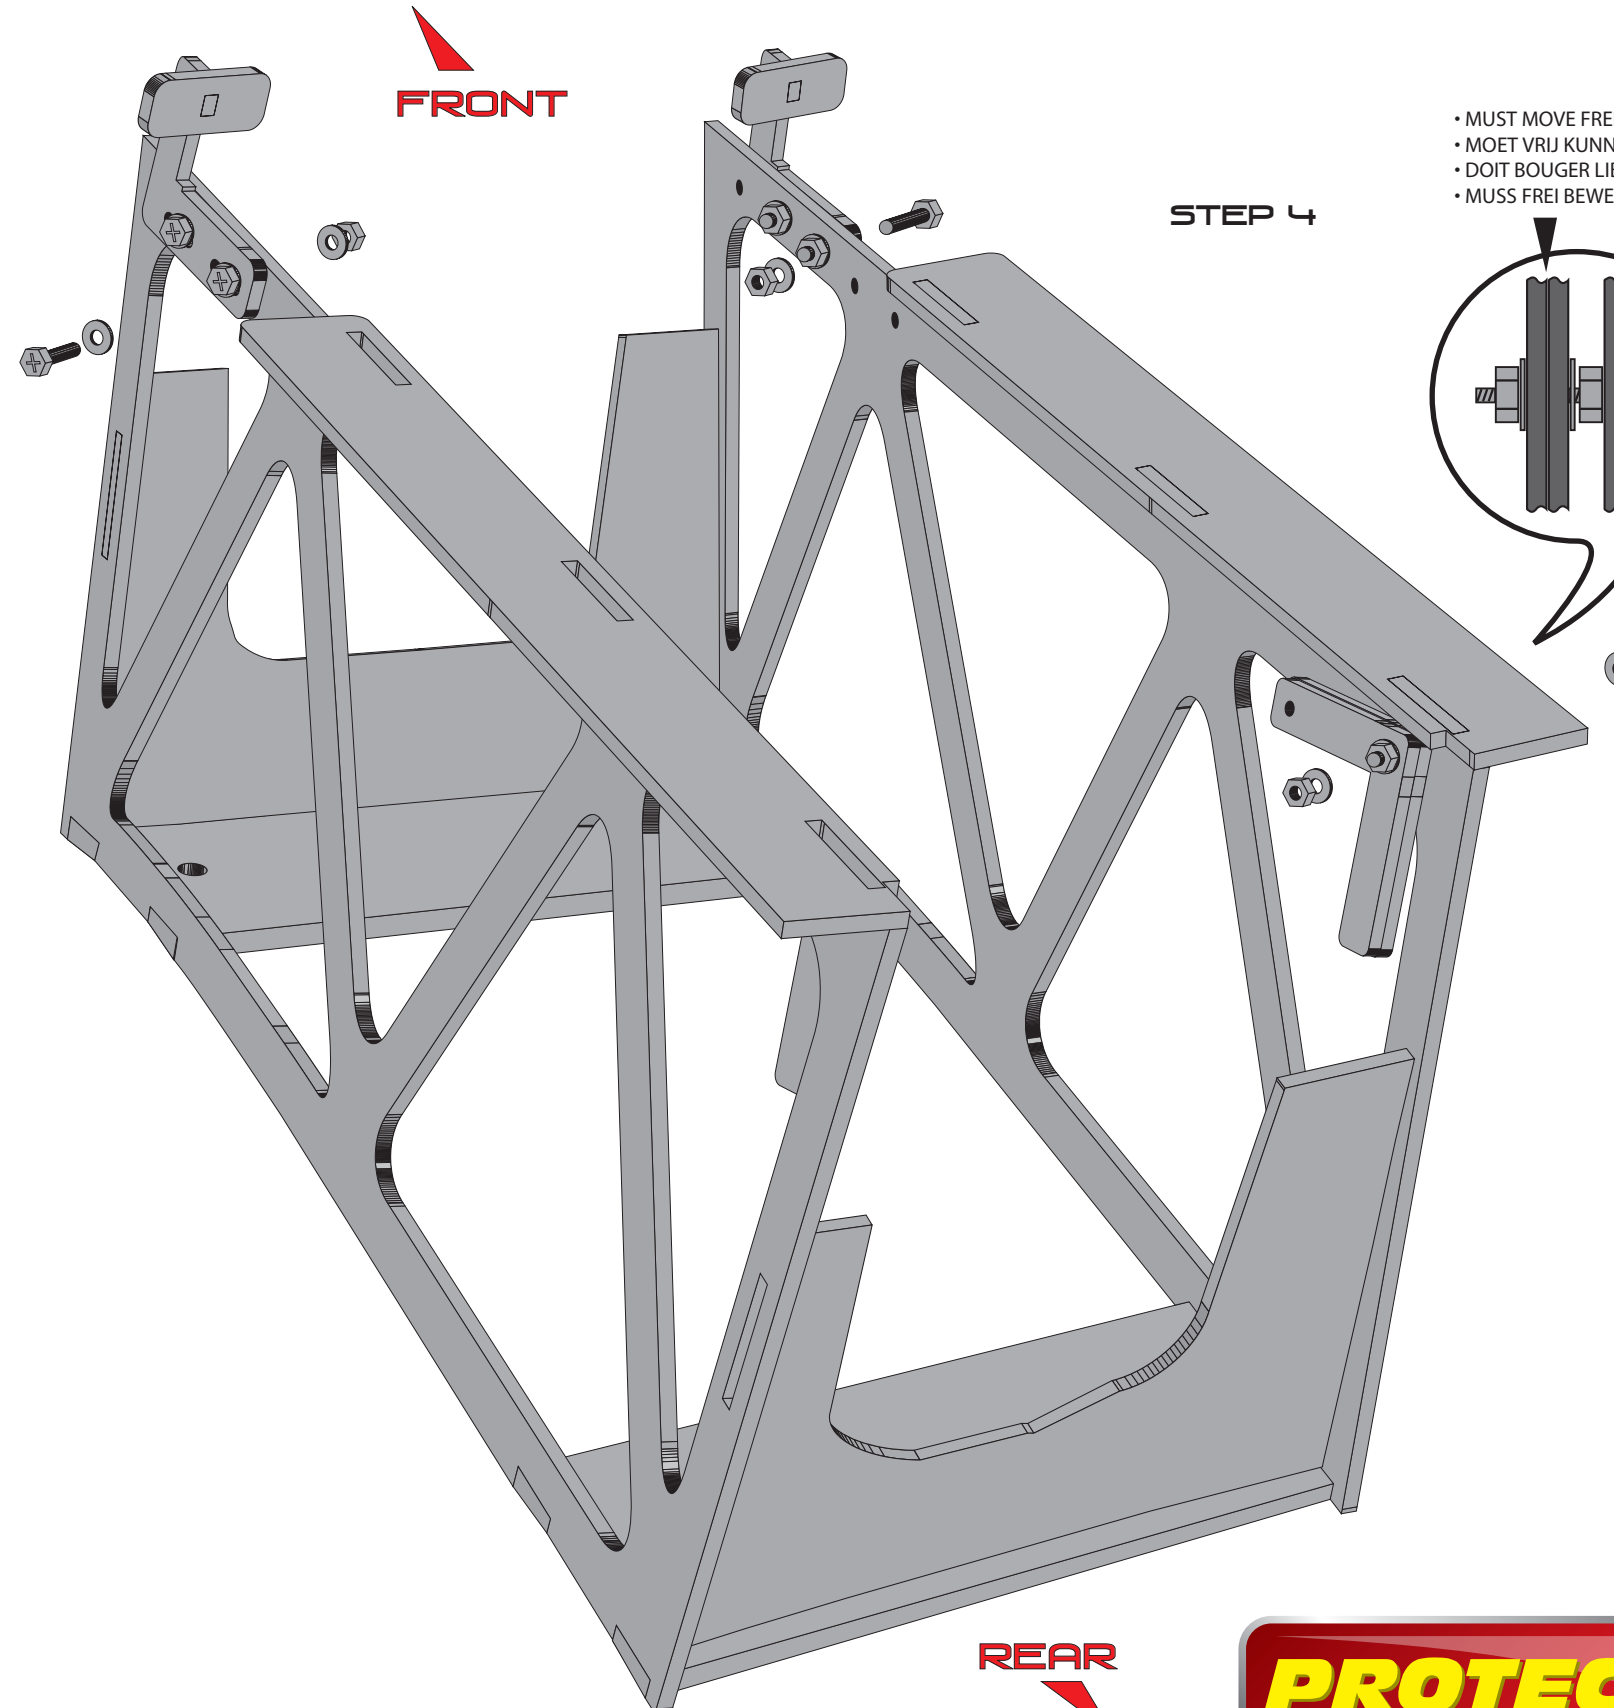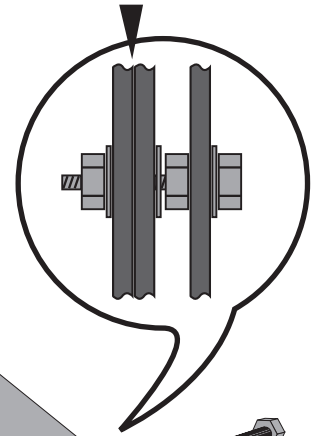


REAR



HUCKEPACK

T0179

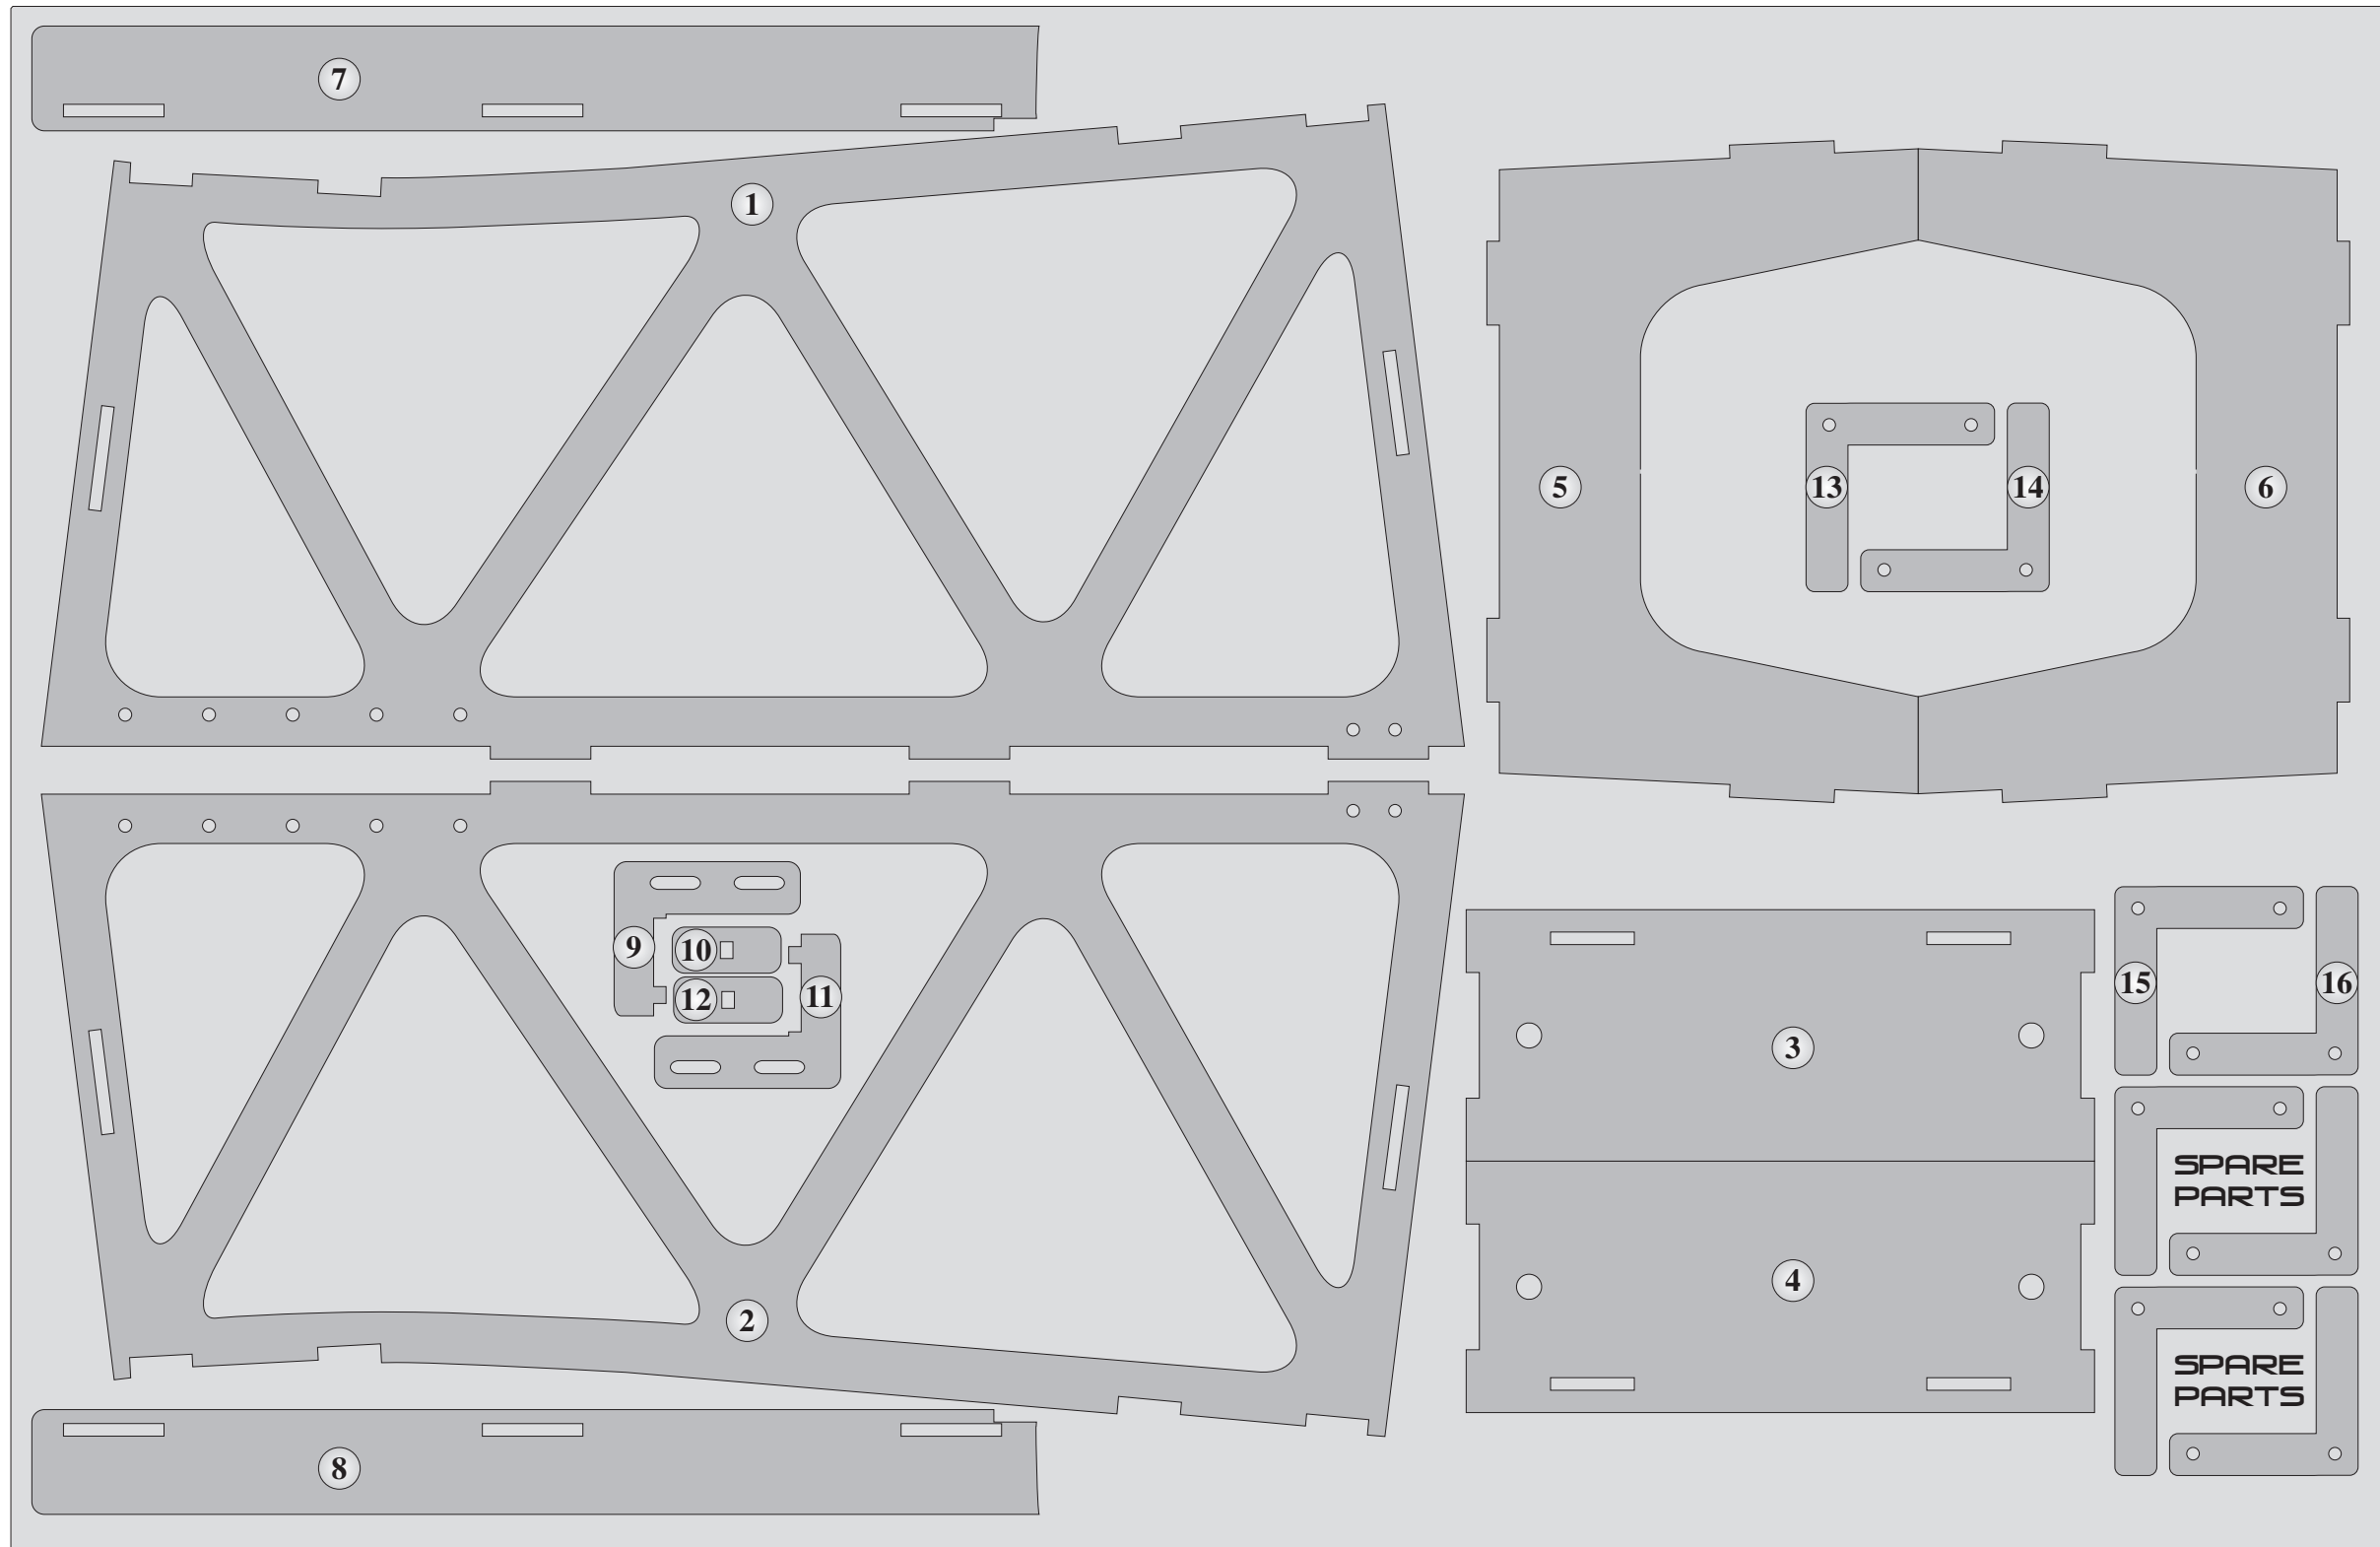


- Glue all wooden parts with wood glue or epoxy
- Verlijm alle houtdelen met houtlijm of epoxy
- Assemblez toutes les pièces en bois avec de la colle à bois ou de la colle époxy
- Verkleben Sie die Holzteile mit Holzklebstoff oder Epoxy Klebstoff


SCREWBAG



6X M3x20
Screw, Schroef,
Vis, Schraube



8X M3
Nylstop nut, Stopmoer,
Nylstop, Stop-Mutter



16X 3,2x7mm
Spacer, Rondel,
Rondelle, Scheibe

PROTECH